

NewEraSOS™
Scientific Optimal Solutions



NewEraSeal™ Wonder Refresher

A Refresher for Sealant Floors with Acrylic Finishes

Product Info

NewEraSeal™ Wonder Refresher is designed to rehab and refresh high-traffic areas or damaged areas that have **NewEraSeal™ Wonder Walk** treated floors.

It may be used to enhance and improve acrylic floor finishes. Used once a month, more or less often as the appearance dictates, this product will greatly multiply the beauty, longevity, and environmental advantages of **NewEraSeal™ Wonder Walk** or acrylic finishes.



Where to Use

- Acrylic Finishes
- VCT
- Vinyl Tile
- Sheet Vinyl
- Rubber
- Poured Polymer (Epoxy)
- Terrazzo
- Marble
- Granite
- Existing Concrete Floors (Polished or Brush Finished)
- Other hard surfaces that are water-friendly

Benefits


- Delays Need for Stripping - Recoating
- Renews High Shine, Non-slip, Static control finish
- Floors always look newly finished
- Highest Shine

- Eliminates all possibilities of powdering.
- Minimizes Scuffing
- Non-yellowing
- Full VOC Compliance



Use Instructions

1. Shake well before using.
2. Remove debris from the surface with a dust mop.
3. If the floor shows heavily locked in the dirt, mop with **Dr. KlarX™ BioDissolve**.
4. Rinse with neutral cleaner then rinse with clean water and allow to dry before applying.

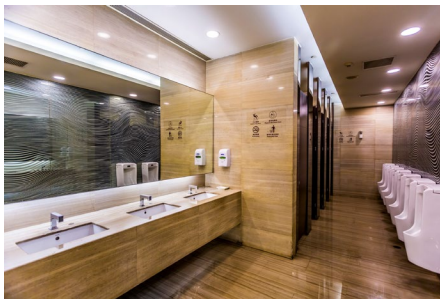

5. Once the floor is clean and dry, lightly mist a 10ft x 20ft area, spraying evenly with a trigger spray bottle or pump sprayer.
6. Force buff dry while the product is still wet on the surface.
7. Move the buffing machine from left to right.
8. When the pad becomes dirty, rinse and reuse.
9. The floor can be used immediately.

Storage


Keep the container closed when not in use.

Store out of direct sunlight.
Keep from Freezing.

Avoid temperatures above 110 °F, or below 40 °F.

Safety

Keep out of reach of children.
Refer to SDS prior to use and follow directions carefully.
Wear rubber gloves and eye protection.

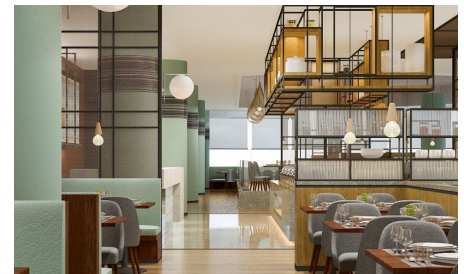


First Aid

EYES: Flush eyes with plenty of water for at least 15 minutes, occasionally lifting the upper and lower eyelids. Get medical attention if irritation persists.

SKIN: Wash with soap and water. Consult a physician if irritation develops.

INGESTION: If this product is swallowed see a physician immediately.

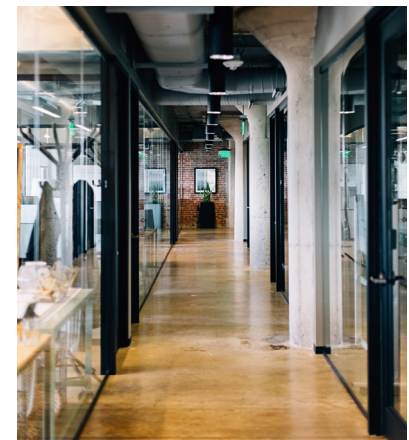

Sizes: 4/1-gal, 5-gal Pails, 275-gal Totes

Appearance: Off-White, Milky Liquid

pH: 8.5-8.9

Flash Point: Same as Water

Solubility: 100% in Water

Stability: Very Stable